



Měrná křivka stanice Moravičany

Stanice: Moravičany										
Tok: Morava										
H(cm)	Q(m ³ /s)									
	0	1	2	3	4	5	6	7	8	9
70	0,805	0,954	1,10	1,31	1,52	1,80	2,07	2,40	2,73	3,17
80	3,60	4,03	4,46	4,90	5,33	5,76	6,19	6,63	7,06	7,49
90	8,05	8,60	9,15	9,70	10,3	10,8	11,4	11,9	12,5	13,0
100	13,6	14,1	14,7	15,3	15,9	16,6	17,2	17,8	18,4	19,1
110	19,7	20,3	21,1	21,8	22,6	23,3	24,1	24,8	25,6	26,3
120	27,1	27,9	28,5	29,2	29,9	30,6	31,3	31,9	32,6	33,3
130	34,0	34,7	35,3	36,1	36,8	37,6	38,3	39,0	39,8	40,5
140	41,3	41,9	42,6	43,2	43,9	44,5	45,2	45,8	46,5	47,2
150	47,8	48,5	49,1	49,7	50,3	50,9	51,5	52,1	52,7	53,3
160	53,9	54,5	55,0	55,6	56,2	56,8	57,3	57,9	58,5	59,0
170	59,6	60,1	60,5	61,0	61,5	61,9	62,4	62,9	63,3	63,8
180	64,3	64,7	65,2	65,6	66,1	66,5	67,0	67,5	67,9	68,4
190	68,8	69,3	69,7	70,2	70,6	71,1	71,5	72,0	72,4	72,9
200	73,4	73,8	74,2	74,7	75,1	75,6	76,0	76,4	76,9	77,3
210	77,8	78,2	78,6	79,1	79,5	79,9	80,3	80,8	81,2	81,6
220	82,1	82,5	83,0	83,5	84,0	84,5	84,9	85,4	85,9	86,4
230	86,9	87,4	87,9	88,4	89,0	89,5	90,0	90,5	91,1	91,6
240	92,1	92,5	92,8	93,2	93,6	93,9	94,3	94,6	95,0	95,4
250	95,7	96,1	96,6	97,0	97,4	97,8	98,2	98,6	99,0	99,4
260	99,8	100,0	101,0	101,0	102,0	102,0	102,0	103,0	103,0	104,0
270	104,0	105,0	105,0	106,0	107,0	107,0	108,0	108,0	109,0	110,0
280	110,0	111,0	111,0	112,0	112,0	113,0	113,0	114,0	114,0	115,0
290	115,0	1116,0	117,0	117,0	118,0	118,0	119,0	119,0	120,0	120,0
300	121,0	122,0	122,0	123,0	123,0	124,0	125,0	125,0	126,0	126,0
310	127,0	128,0	129,0	129,0	130,0	131,0	132,0	132,0	133,0	134,0
320	135,0	135,0	136,0	137,0	137,0	138,0	139,0	139,0	140,0	141,0
330	141,0	142,0	143,0	144,0	145,0	146,0	147,0	148,0	149,0	150,0
340	151,0	152,0	153,0	154,0	155,0	156,0	157,0	158,0	159,0	160,0
350	161,0	162,0	164,0	165,0	167,0	168,0	170,0	171,0	173,0	174,0
360	176,0	177,0	179,0	180,0	181,0	183,0	184,0	186,0	187,0	188,0
370	190,0	191,0	193,0	195,0	197,0	199,0	200,0	202,0	204,0	206,0
380	208,0	209,0	211,0	213,0	215,0	217,0	219,0	221,0	223,0	225,0
390	227,0	229,0	231,0	233,0	235,0	237,0	239,0	241,0	243,0	245,0
400	247,0	249,0	251,0	253,0	255,0	258,0	260,0	262,0	264,0	266,0
410	269,0	271,0	273,0	275,0	278,0	280,0	282,0	285,0	287,0	289,0
420	291,0	294,0	296,0	299,0	301,0	303,0	306,0	308,0	311,0	313,0
430	316,0	318,0	321,0	323,0	326,0	328,0	331,0	333,0	336,0	338,0
440	341,0	344,0	346,0	349,0	352,0	354,0	367,0	360,0	362,0	365,0
450	368,0	370,0	373,0	376,0	379,0	382,0	384,0	387,0	390,0	393,0
460	396,0	398,0	401,0	404,0	407,0	410,0	413,0	416,0	419,0	422,0
470	425,0	428,0	431,0	434,0	437,0	440,0	443,0	446,0	449,0	452,0
480	455,0	458,0	461,0	464,0	467,0	470,0	473,0	476,0	479,0	

Platnost od 1.3.2006 (ČHMÚ)

Měrná křivka stanice Moravičany - zdrojová data